

AMDS Selection Software Digital Variable Multi

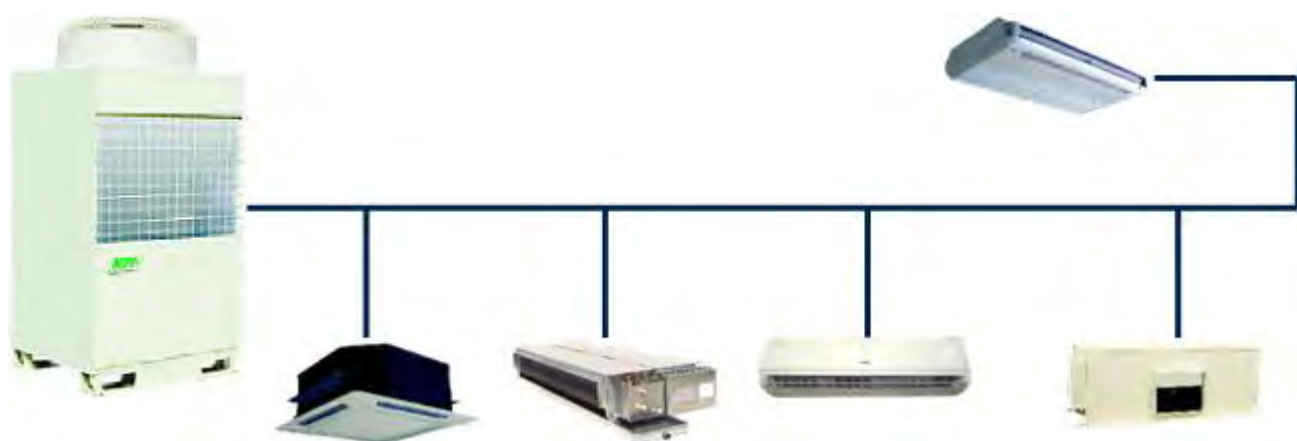


Table of Content

1.0 Introduction to Selection Process.....	1
1.1 Study the floor plan layout and confirm the conditioned space.....	1
1.2 Select the locations available for outdoor units and indoor units.....	1
1.3 Select the model for indoor unit.....	1
1.4 Partition the air conditioning system	1
1.5 Calculate the occupying area of each indoor unit.....	2
1.6 Selection through Software.....	2
1.7 Output selection report.....	2
2.0 Software Operation.....	3
2.1 Installation of selection software.....	3
2.2 Start the selection software.....	3
2.3 Create new project.....	4
2.4 AMDS system selection process.....	5
2.4.1 Selection base on area.....	7
2.4.2 Selection base on cooling load.....	8
2.5 Completing AMDS system selection process.....	8
2.5.1 Selection with Calculation tab.....	8
2.5.2 Selection with Quick Calculation tab.....	9
2.6 Output selection report.....	9
2.7 Other features.....	10
2.7.1 Change system type.....	10
2.7.2 Adding text into system layout drawings.....	10
2.7.3 Output system layout drawings.....	10
2.7.4 Version information.....	10
2.7.5 Locking function for indoor unit selection.....	11
2.7.6 Password changing.....	11
2.7.7 Unit changing.....	11
2.8 Error messages.....	11
2.8.1 Imbalance cooling capacity distribution.....	12
2.8.2 Maximum indoor units connectable exceeded.....	12
2.8.3 Can't get proper refnet or distributor.....	13
2.8.4 Piping length exceeds limitation.....	13
2.8.5 Input piping length.....	14
2.8.6 Unreasonable unit selection.....	14
3.0 Appendix.....	15
3.1 Requirements on size of refrigerant copper pipe of R22 series units.....	15
3.2 Requirements on size of refrigerant copper pipe of R410A series units.....	16
3.3 Dimensions of refnet and distributor.....	17
3.4 Combination between indoor unit and EXV box.....	18

This manual is prepared based on the latest version of AMDS Selection Software at that time (Digital Variable Multi Version 3.3). Please take note that any AMDS Selection Software that is older than current latest version will not be supported by OYLM.



Caution


Please retain this manual carefully for further reference if there is any problem


1.0 Introduction to Selection Process

1.1 Study the floor plan layout and confirm the conditioned space

First, obtain the architectural base drawing or building floor plan layout from the client. Study the drawing carefully and determine the conditioned and unconditioned space.

1.2 Select the locations available for outdoor units and indoor units

Review the site and communicate with client. Then, select the locations for outdoor units and indoor units inside the conditioned space. For example, outdoor and indoor units can be located in shaded area .

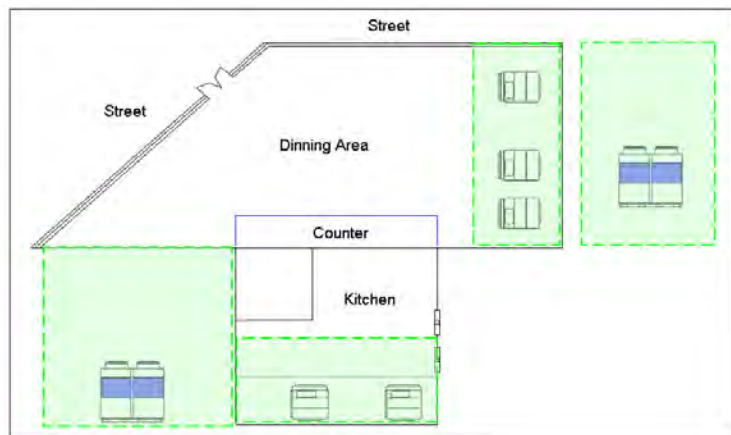


1.3 Select the model for indoor unit

Select suitable model for indoor unit according to the function and requirement of each air conditioned space. The table below shows the indoor unit models offered by Acson, together with their capacity respectively.

Model		Capacity Range (kW)	
		Cooling	Heating
Ceiling concealed	ACCD/A5CCD	2.8 – 16.4	3.2 – 18.5
Ceiling cassette	ACKD/A5CKD	2.8 – 14.0	3.2 – 16.0
High static ducted blower	ADBD	22.4 – 28.0	25.0 – 31.5
Ceiling convertible	ACMD/A5CMD	3.6 – 16.4	4.0 – 18.5
Wall mounted	AWMD/A5WMD	2.5 – 6.5	2.8 – 7.4


1.4 Partition the air conditioning system

Decision has to be made on how many air conditioning systems are needed to condition the building. Divide the building into several partitions of air conditioning systems and set the connection sequence of indoor units according to the distance and location relative to outdoor unit.

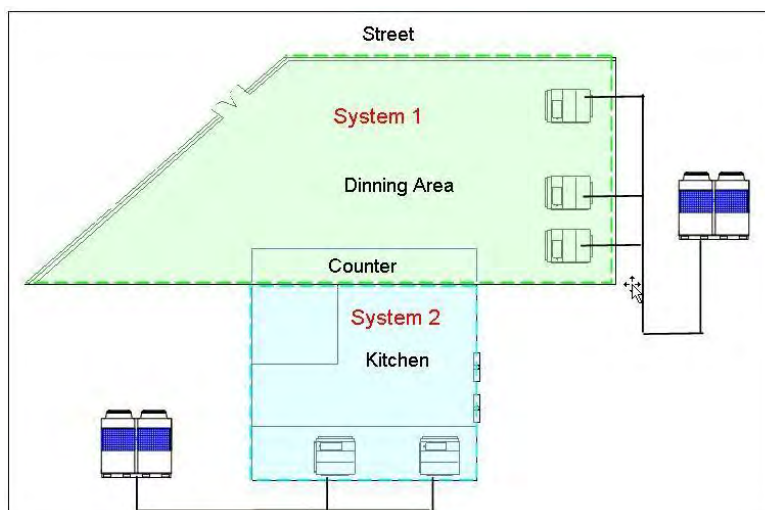


1.5 Calculate the occupying area of each indoor unit

Calculate the occupying area of every indoor unit. It is important to take into account on the heat load within the conditioned space.

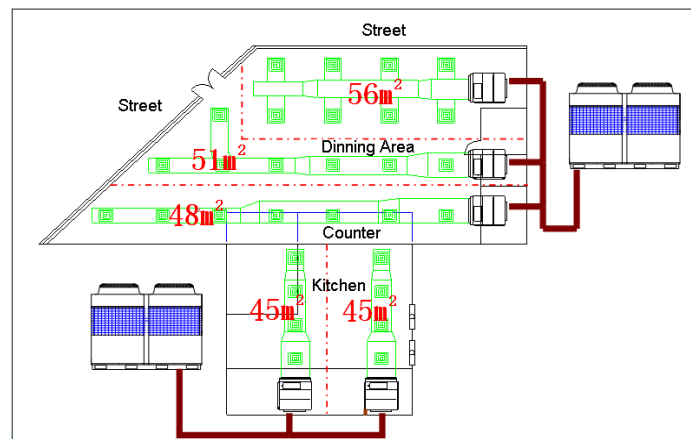

1.6 Selection through Software

Select the outdoor model by entering information such as piping length, indoor models, system layout and design condition. Through the selection software, piping diameter, refnet and distributor will be selected.

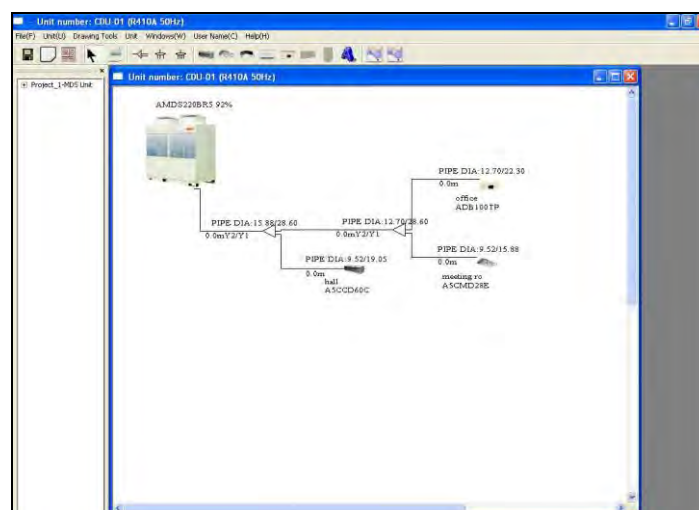

1.6 Output selection report

After completion of selection, report can be output in excel or PDF format for ordering.

ACSON®AMDS multi digital scroll units selection list							
System Name	Room Name	Room Area m ²	Function	Design Capacity (Watt/2)	Model	Actual Load/ Capacity (Watt)	Rated Power/ Input (Watt)
CDU-01 AMDS200RS (50/95 DWH) Actual capacity ratio 52%/93% Power Input 17.7 kW Power 360 TON – 50kW Peak-to-peak difference: 5.0m The longest peak length: 20.9m IR (4.0)Additional charge 0.9 g Cooling D657 0.0W/8 to 0.9g Heating D650 0.0W/8 to 0.9g Cooling D616 0.0W/3.0 to 0.9g	office	110	Office	23.5	ADB100TP	28,000 ±5	255/220
	meeting rm	10	Meeting Room	25.4	ASCMDB3E	8,060	8000/60
	hall	60	hall	23.5	ASCCDB3C	15,410 ±5	273/330
	Subtotal	100	—	—	—	52,460 ±0	2289 ±0
	Copper/Pipe	6.35mmx0.8	0.0	9.52mmx0.8	0.0	12.7mmx0.8	0.0
CDU-02 AMDS200RS (50/95 DWH) Actual capacity ratio 52%/93% Power Input 17.7 kW Power 360 TON – 50kW Peak-to-peak difference: 5.0m The longest peak length: 20.9m IR (4.0)Additional charge 0.9 g Cooling D657 0.0W/8 to 0.9g Heating D650 0.0W/8 to 0.9g Cooling D616 0.0W/3.0 to 0.9g	Copper/Pipe	15.8mmx1.0	0.0	19.05mmx1.0	0.0	22.3mmx1.0	0.0
	Copper/Pipe	28.5mmx1.0	0.0	31.75mmx1.1	0.0	34.9mmx1.3	0.0
	Copper/Pipe	38.1mmx1.0	0.0	41.3mmx1.5	0.0	22.3mmx1.0	0.0
	Rethat	MDS-V1A	2	MDS-V2A	2	MDS-V3A	0
	Rethat	MDS-V1A	0	MDS-V2A	0	MDS-V7A	0
CDU-03 AMDS200RS (50/95 DWH) Actual capacity ratio 52%/93% Power Input 17.7 kW Power 360 TON – 50kW Peak-to-peak difference: 5.0m The longest peak length: 20.9m IR (4.0)Additional charge 0.9 g Cooling D657 0.0W/8 to 0.9g Heating D650 0.0W/8 to 0.9g Cooling D616 0.0W/3.0 to 0.9g	Rethat	MDS-C1A	0	MDS-C2A	0	MDS-C3A	0
	Subtotal	100	—	—	—	52,460 ±0	2289 ±0
	Copper/Pipe	6.35mmx0.8	0.0	9.52mmx0.8	0.0	12.7mmx0.8	0.0
	Copper/Pipe	15.8mmx1.0	0.0	19.05mmx1.0	0.0	22.3mmx1.0	0.0
	Copper/Pipe	28.5mmx1.0	0.0	31.75mmx1.1	0.0	34.9mmx1.3	0.0
CDU-04 AMDS200RS (50/95 DWH) Actual capacity ratio 52%/93% Power Input 17.7 kW Power 360 TON – 50kW Peak-to-peak difference: 5.0m The longest peak length: 20.9m IR (4.0)Additional charge 0.9 g Cooling D657 0.0W/8 to 0.9g Heating D650 0.0W/8 to 0.9g Cooling D616 0.0W/3.0 to 0.9g	Rethat	MDS-V1A	2	MDS-V2A	2	MDS-V3A	0
	Rethat	MDS-V1A	0	MDS-V2A	0	MDS-V7A	0
	Rethat	MDS-C1A	0	MDS-C2A	0	MDS-C3A	0
	Subtotal	100	—	—	—	52,460 ±0	2289 ±0
	Copper/Pipe	6.35mmx0.8	0.0	9.52mmx0.8	0.0	12.7mmx0.8	0.0

Note: Subtotal (charge) for pipes at standard condition (indoor DBWB35C/24C, indoor DBWB27C/19C).

Engineered for flexibility and performance TM
Software Ver. H3.3.2
The selection is only for reference, the detailed project is up to the field condition.

ACSON®AMDS multi digital scroll units selection list

Device Type Model Quantity

Outdoor Unit Variable digital scroll AMSCDB3E 1

Indoor Unit Control ASD100TP 1

ASCDDB3E 1

ASCCDB3C 1

ASCMDB3E 1

ASCDDB3C 1

ASCMDB3E 1

ASCDDB3C 1

ASCMDB3E 1

ASCDDB3C 1

ASCMDB3E 1

ASCDDB3C 1

ASCMDB3E 1

ASCDDB3C 1

ASCMDB3E 1

ASCDDB3C 1

ASCMDB3E 1


ASCDDB3C 1

2.0 Software Operation

2.1 Installation of selection software


The installer for AMDS Selection Software (Digital Variable Multi) can be downloaded from e-Biz. Kindly login to e-Biz and go to [e-Product](#) > [System Selling Kit](#) > [Multi Digital Scroll](#) > [Selection & Commissioning Software](#) to download the file. During installation, kindly choose the desired location (refer to diagram on the right) and click “Next” to continue.

Remark: If the software does not work normally when it is installed on the system disk, kindly uninstall the software and re-install it in disk location other than system disk.

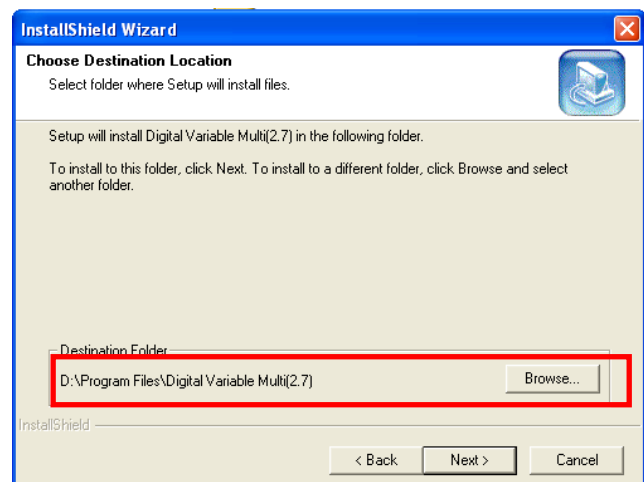


2.2 Start the selection software

After installing the software, run the selection software by double-click the desktop shortcut icon. Alternatively, it can be run by go to [Start](#) > [Programs](#) > [Digital Variable Multi Software](#) > [Digital Variable Multi](#).

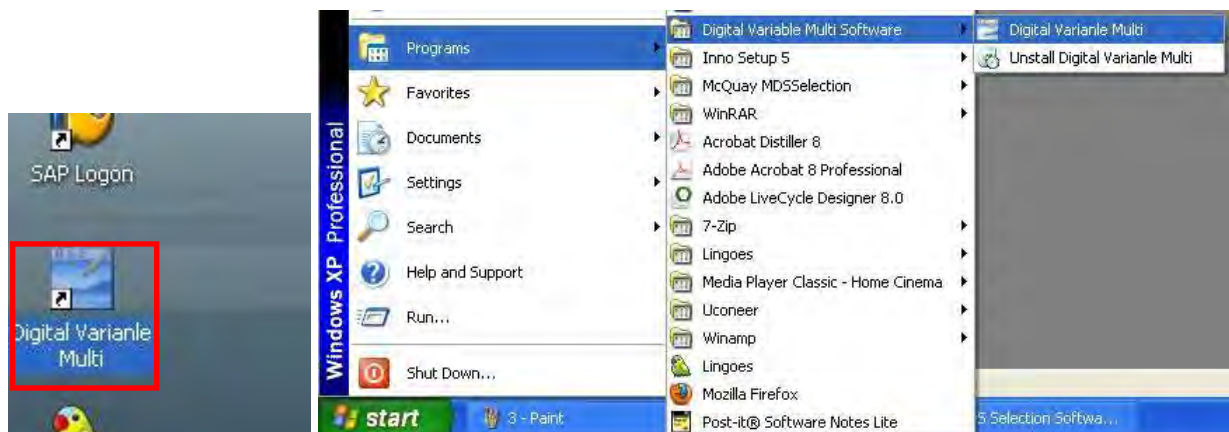

During start-up of the software, a login window will be prompt. Kindly enter your username and password accordingly. If internet connection is available, please ensure the **CheckNet** is ticked before clicking **OK** to use the software (refer to diagram on the right). If internet connection is not available for the moment, uncheck the **CheckNet** dialogue box before log in.

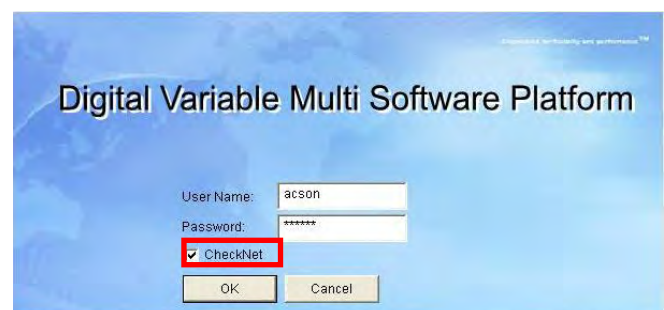

When there's any update, an update dialogue box will prompt out and begins to download the necessary files to update the software's database. Once update is completed, users have to login again in order to use the software. If there's no update available, the software will enter the selection page directly.



Please note that during first time login, internet connection is a must as the software needs to update the product database before usage. Besides that, username will be terminated if:

- User never login into the software for 90 days.
- User did not login with **CheckNet** for 60 days.


Remark: It is advisable for user to connect to the internet and tick the “checknet” dialogue during every login. This is to ensure the software database is up-to-date in order to avoid any wrong selection.

If you are unable to connect to the server, kindly ensure that you are running the software as administrator and also ensure connection to the server (IP: 210.75.20.9) is not blocked by any firewall.


For users who wish to register for Username and Password, kindly download the User Application Sheet from [e-Product](#) > [System Selling Kit](#) > [Multi Digital Scroll](#) > [Selection & Commissioning Software](#), fill up and sent to ganpwk@oyl.com.my.

2.3 Create new project


After login into the selection software, you will be prompt with the selection software's interface. To create a new project, go to [File](#) > [New](#).

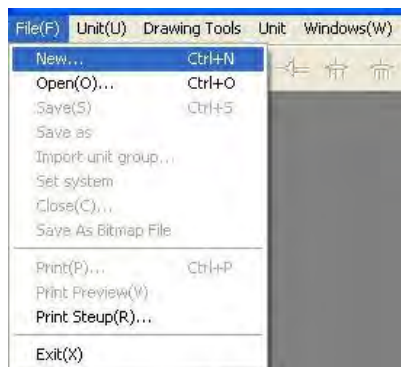


Next, key in the desired project name (file name) and click **OK**. You may select the location where the files for this project will be saved (as highlighted).

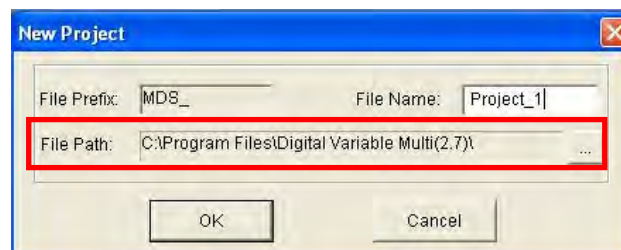


Select the appropriate system type according to refrigerant and design temperature requirement.

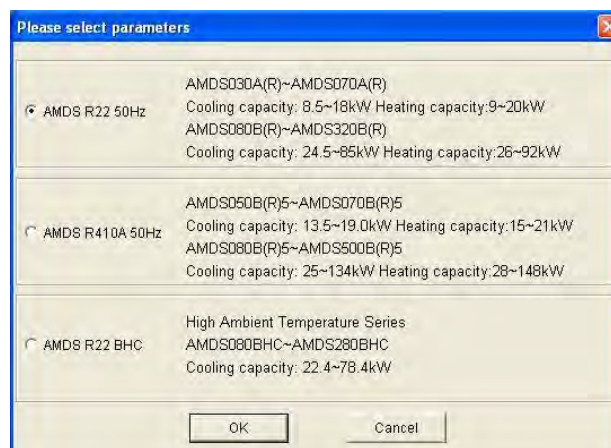


Under this project folder, user may starts to create AMDS systems by clicking **Unit Management** icon  or go to [Unit > Unit Management](#). A dialogue box will pop up, fill in the name of the **New Unit** (For example: CDU-01) and click “New” to proceed to the interface of unit selection (refer to diagram below).


Remark: If user wants to rename the system, simply select the **Unit Name**, and then key in the desired name in the **Rename Unit** column and click **Rename**. Similarly, user may delete a system by selecting the system and click **Delete** and copying a system by selecting **Copy** (useful when creating similar system in one project).

Please take note that renaming of system name can only be done within the software. If user rename the project file manually without using this software, the file will no longer be recognized by the software and it will failed to be opened in future.

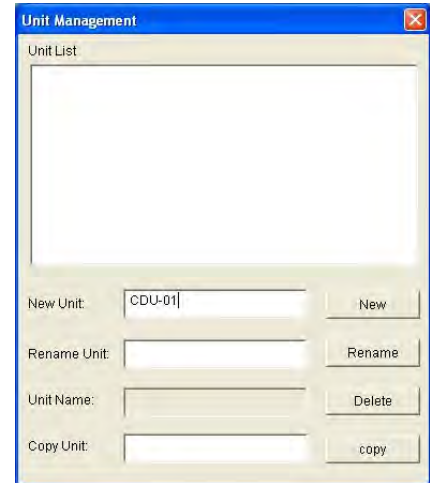


2.4 AMDS system selection process

To begin with the selection, click on the **MDS** tab  in the tool bar and a new dialogue box will pop up (refer to diagram below).

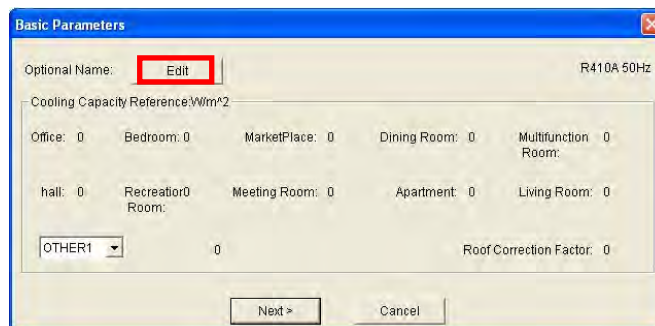

Click **Edit** to set the **Cooling Capacity Reference** according to city location. **Cooling Capacity Reference** for some city is already available. User may select directly if appropriate. If desired city is not within the list, user can add in new reference by clicking **Add**.

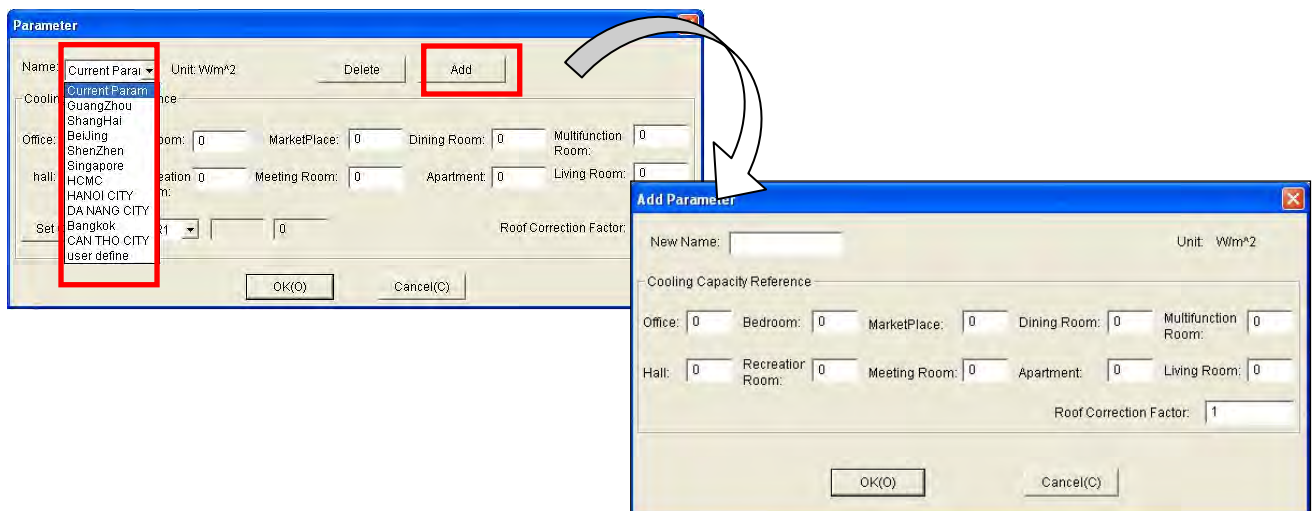

After selecting the **Cooling Capacity Reference**, click **OK** to proceed to next screen. Here, users have to define the basic parameter of the outdoor unit:

- Unit Selection: Determine the model of AMDS system (cooling only or heatpump model)
- Height Diff.: Determine the position of outdoor and height difference between outdoor and indoor unit.
- I/O Ratio: Determine the designed input/output ratio. Range from 100-120%.
- Cooling Condition: Determine the design ambient and indoor condition under cooling mode.
- Heating Condition: Determine the design ambient and indoor condition under heating mode.

Remark: For I/O Ratio, it is recommended to set as 100%. Please do not select 120% if the simultaneous use factor is high.

 

The 'Basic Parameters' dialog box is shown with the following settings:

- Unit Quantity: 1
- Height Diff.: 0 Unit: m
- Unit Selection: Heat Pump
- I/O Ratio: 100 %
- Cooling Condition: Indoor DB 27, WB 19, Ambient DB 35, WB 24
- Heating Condition: Indoor DB 20, WB 15, Ambient DB 7, WB 6

Remark: Positive Height refers to outdoor installed above indoor units, while Negative Height refers to indoor installed above outdoor unit.


After selecting the **Basic Parameter** for outdoor unit, click **OK** to proceed. The mouse cursor will now turn into an icon of AMDS outdoor unit. Simply click on the empty selection space to continue.



Selection continues with inserting the refnet or distributor joint to the drawing. This can be done by clicking refnet  or distributor  icon. The mouse cursor will turn into the icon of refnet or distributor, and user can now construct the system frame work step by step according to the designed layout of indoor and outdoor unit. Simply click the square boxes to place the refnet or distributor into the system.



After the system framework is finished, select the indoor units according to project requirement. Select desired indoor models by clicking the tab on top (refer to figure below, highlighted), follow by clicking the square box within the selection space to place the indoor unit into the system.

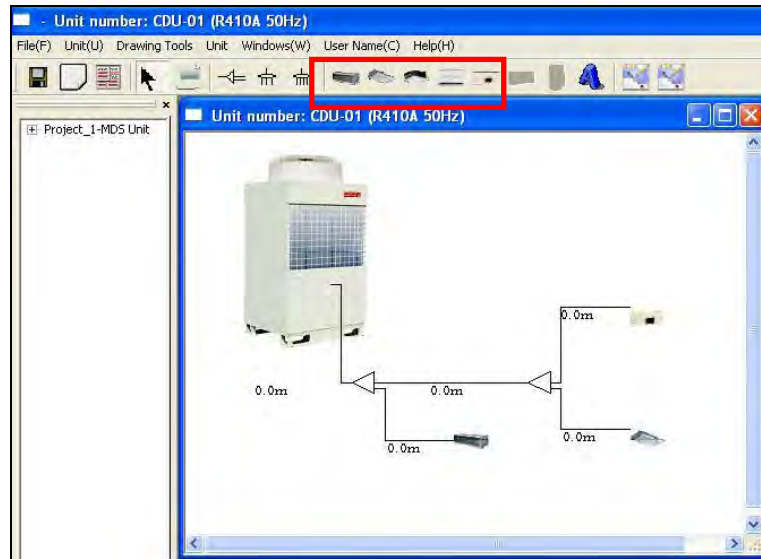

To complete indoor model selection, double click on the icon of the respective indoor unit and a new window will pop out.

Here, user can choose to complete the indoor unit selection by any of the two methods:

2.4.1 Selection base on area

By using this method, users are requested to enter information such as:


- Room Name: Name of the conditioned room
- Area: Area of the conditioned room
- Facing Direction: The conditioned room's facing direction (North, East, West, South)
- Floor Number: Floor specification for the conditioned space.
- Function: Function of the conditioned space. This will determine the cooling load required.

After entering this information, click **Apply** and the recommended indoor unit will be displayed in the **Model** section. Click **OK** to select the indoor.

2.4.2 Selection base on cooling load

If the specific cooling load for the conditioned space is known, user may use this method to select for indoor models. First, select **base on cooling load** and enter the **Cooling Load** into the dialogue box. Next, click on **Apply** and the software will automatically select an appropriate indoor unit for the required load. Click **OK** to confirm the selection.

2.5 Completing MDS system selection process


After completing the selection for indoor units, the outdoor unit needs to be selected. This is done by clicking the **Calculation** icon  in the toolbar.




There are two calculation tabs in the toolbar. On the left is the **Calculation** tab while on the right is the **Quick Calculation** tab. User may choose to use either tab to select the outdoor unit.

2.5.1 Selection with Calculation tab

In order to use the **Calculation** tab, users have to enter the length of each piping within the MDS system. This can be done by moving the mouse cursor over the value of piping length. The piping length value will turn into blue and user can now enter their desired piping length to continue.

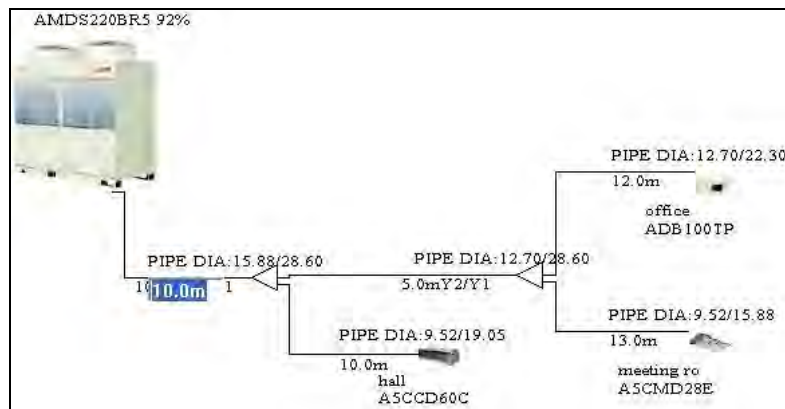


After all piping length is determined, user can now click the **Calculation** tab in the toolbar and a new window will prompt with recommended outdoor selection for this system. Select the desired outdoor model and click **OK** to complete the selection process.

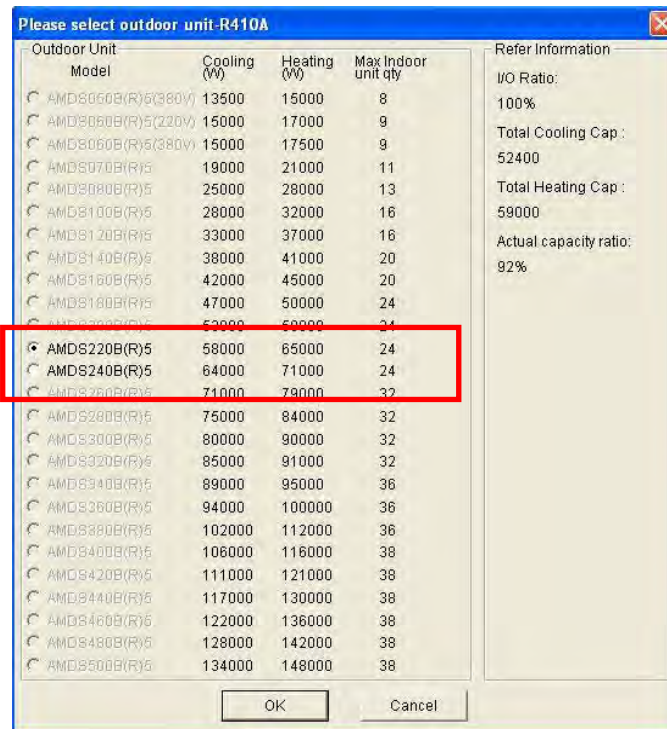


2.5.2 Selection with Quick Calculation tab

If user uses Quick Calculation to select for outdoor unit, a new window will prompt out. Here, users have to input the length of the longest branch within the system in **Last Length** and click **OK**. A new window will prompt with recommended outdoor selection for this system. Select the desired outdoor model and click **OK** to complete the selection process.

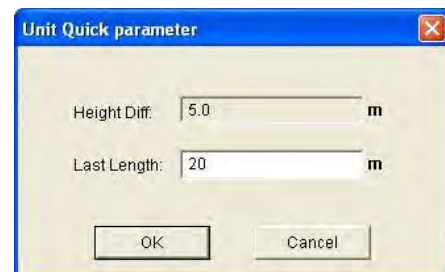

2.6 Output selection report

Upon completion of the selection process, user can choose to generate a report for this selection in either PDF or Excel format. Simply go to **Unit > PDF Report** or **Excel Report**.

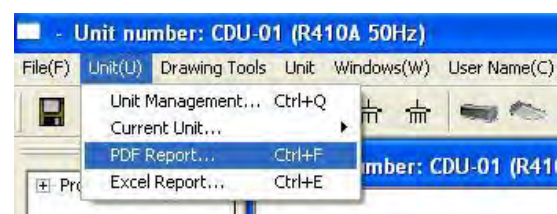

Next, user can choose to select **refnet with insulation** or **without insulation** and click **OK** to generate the report.




2.7 Other features


2.7.1 Change system type

When user requires changing the system type (For example: changing from R22 system to R410A system), click on the **Set System** tab in the toolbar to reset it.

Remark: All indoor units must be reselected after changing the type of system to obtain the correct indoor unit model.


2.7.2 Adding text into system layout drawings

To differentiate each system layout drawings, text can be added into the layout by using the **Text** tab .

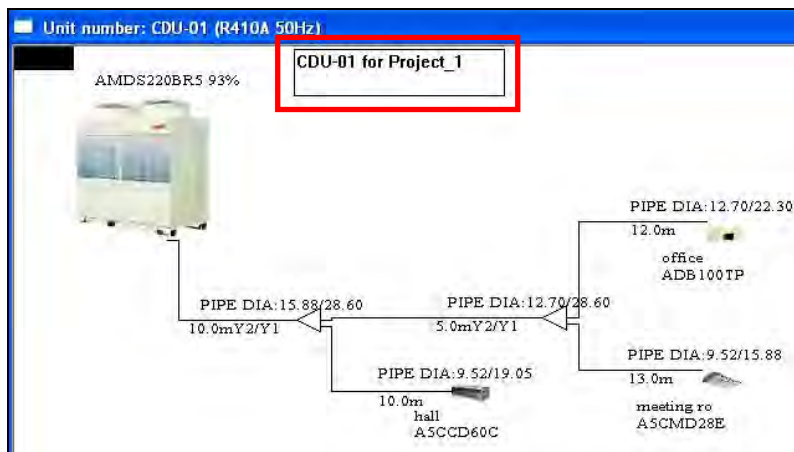


2.7.3 Output system layout drawings

All system layout drawing can be output to bitmap (.bmp) image file. Go to [File > Save As Bitmap File](#).

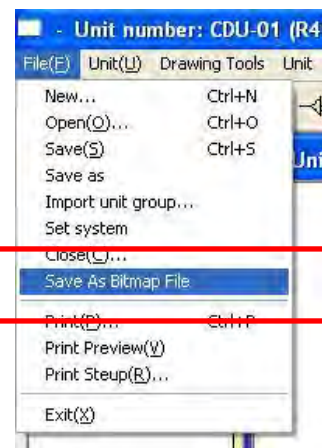


2.7.4 Version information

User may check the software version by go to [Help > About MDS](#).

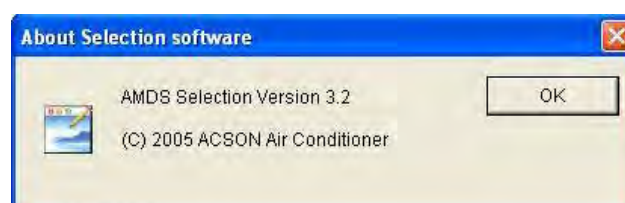

2.7.5 Locking function for indoor unit selection

To prevent the indoor unit model to change under any circumstance, user can choose to tick on **Appoint Indoor** checkbox when selecting indoor unit.

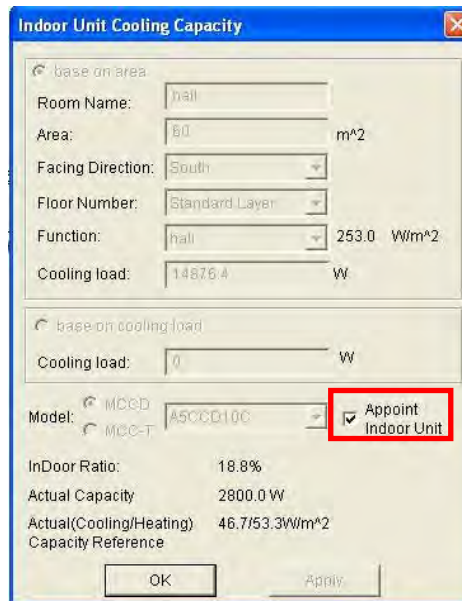

2.7.6 Password changing

To ensure the software is protected and used only by authorized personnel, the password of the software can be changed manually. Go to [User Name > Change Password](#). User will have to enter the existing password before changing to the new password. After the password is changed, kindly inform the software administrator through this e-mail address: ganpwk@oyl.com.my



2.7.7 Unit changing

User may change between metric and imperial unit by go to [Unit > Imperial Unit](#) or [Metric Unit](#).


2.8 Error messages

When designing MDS system, there are a few limitations which have to be taken into consideration:

- Maximum connectable indoor
- Piping length limitation
- Refrigerant distribution limitation

Please refer to appendix for detail tables and description on each limitation. Once a selection has exceeded the limitation, error message will pop out to request user to amend the system design.

2.8.1 Imbalance cooling capacity distribution

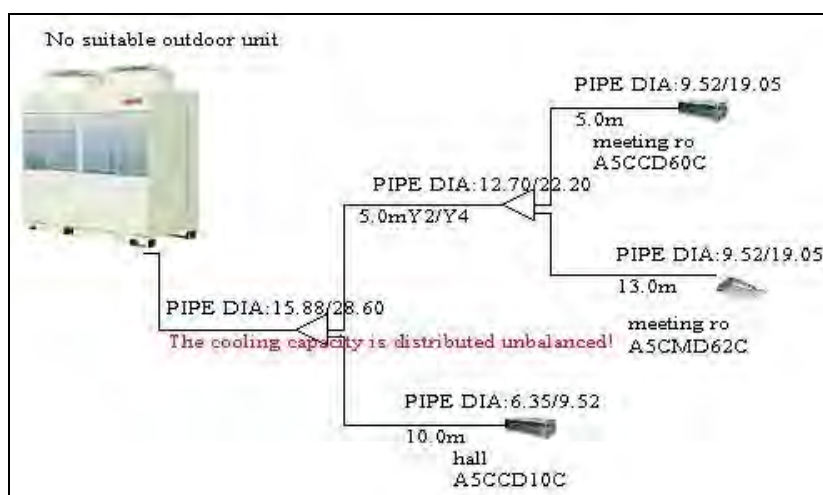

For every refnet joint in a system, the smaller branch shall occupy at least 10-15% of the total capacity distributed by that refnet (depends on piping length and overall system layout), while the larger branch shall sustain the remaining. If the distribution is imbalance, a warning will appear.

Taking the figure above as an example, the smaller branch is supplying 3.6kW of capacity, while the larger branch supply for 32.8kW of capacity. The capacity occupied by the smaller branch is around 10%


2.8.2 Maximum indoor units connectable exceeded

Every outdoor unit has its limitation on the maximum connectable indoor units. Please refer to the following table for indoor quantity limitation. If the selected value exceeds the limit, the following message will appear:
For example: **MDS240 indoor unit amount cannot exceed 24.**

R22 Model	R410A Model	Maximum Indoor Quantity
AMDS 30A(R)	-	5
AMDS 40A(R)	-	6
AMDS 50A(R)	A5MDS 50B(R)	8
AMDS 60A(R)	A5MDS 60B(R)	9
AMDS 70A(R)	A5MDS 70B(R)	11
AMDS 80B(R)	A5MDS 80B(R)	13
AMDS 100B(R)	A5MDS 100B(R)	16
AMDS 120B(R)	A5MDS 120B(R)	16
-	A5MDS 140B(R)	20
AMDS 150B(R)	-	20
-	A5MDS 160B(R)	20
AMDS 180B(R)	A5MDS 180B(R)	24
AMDS 200B(R)	A5MDS 200B(R)	24
AMDS 220B(R)	A5MDS 220B(R)	24
AMDS 240B(R)	A5MDS 240B(R)	24
AMDS 260B(R)	A5MDS 260B(R)	32
AMDS 280B(R)	A5MDS 280B(R)	32
AMDS 300B(R)	A5MDS 300B(R)	32
AMDS 320B(R)	A5MDS 320B(R)	32
-	A5MDS 340B(R)	36
-	A5MDS 360B(R)	36
-	A5MDS 380B(R)	36
-	A5MDS 400B(R)	38
-	A5MDS 420B(R)	38
-	A5MDS 440B(R)	38
-	A5MDS 460B(R)	38
-	A5MDS 480B(R)	38
-	A5MDS 500B(R)	38


2.8.3 Can't get proper refnet or distributor

This error will appear when the software is unable to select a refnet/distributor that meets the requirement of the selection. This error rarely occurs. However, if such error occurs, adjust the cooling capacity ratio between the branches of the refnet/distributor.

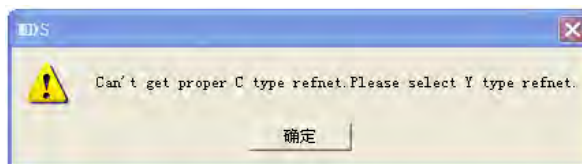

2.8.4 Piping length exceeds limitation

When the designed system's piping length has exceeded the limitation of AMDS system, an error message will appear.

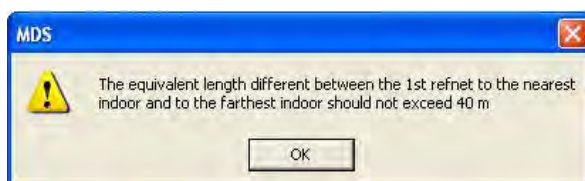


Please design the system according to the piping limitation stated as below.

Remark: When the longest piping branch has a length which exceeds 90% of the maximum allowable length (refer to the table below):


- The gas pipe connected to the unit will automatically increase by one size.
- The refnet pipe will be selected with the new increased size automatically.
- A warning message will appear.

			R-22			R-410A		
Length (m)			3-5HP	6-7 HP	8-32 HP	5HP	6-7 HP	8-50 HP
Piping	Total equivalent length		100	150	350	100	150	500
	Maximum length of longest branch	Actual piping length	50	70	125	50	70	150
		Equivalent length	60	80	150	60	80	175
	Maximum equivalent length from first branch to furthest unit		25	30	40	25	30	65
Height	Between further indoor and outdoor	outdoor above	20	30	50	20	30	50
		indoor above	20	30	40	20	30	40
	Maximum height between indoor unit		15					

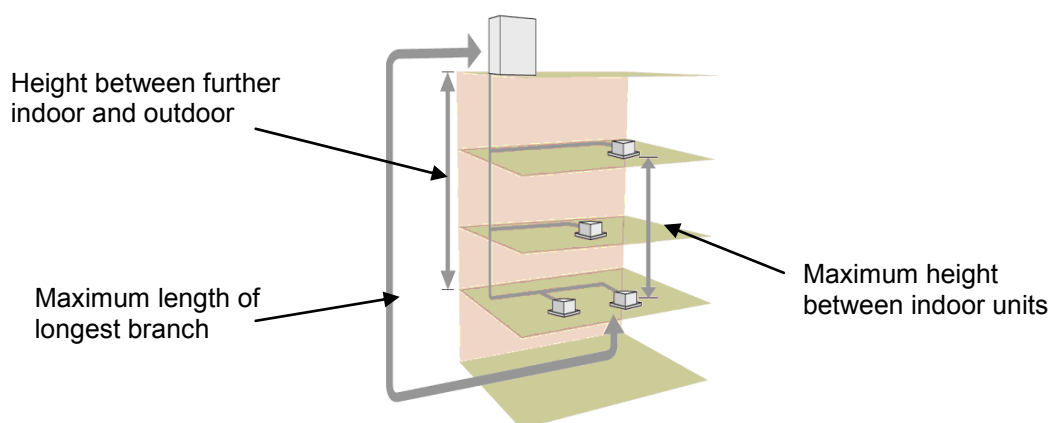

2.8.5 Input piping length

When user want to use the **Calculation** tab to select the outdoor unit, the length of every piping has to be enter into the selection drawing. If there is any piping length that is not defined, the error below will show.

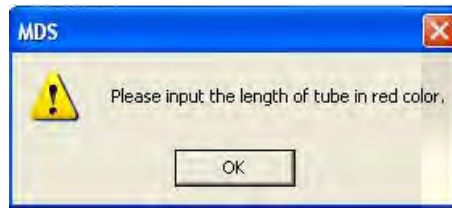

Kindly locate the piping in red and enter the piping length before proceed to outdoor unit selection.

2.8.6 Unreasonable unit selection

When ducted blower is selected within an AMDS system, other indoor unit should not have capacity lower than 27,000 Btu/h. If unit with capacity lower than that is selected, the following error will show. Kindly re-select the indoor unit accordingly.



3.0 Appendix

3.1 Requirements on size of refrigerant copper pipe of R22 series units

Specification table for MDS-A Series

Type		Outdoor unit capacity	MDS030A(R)	MDS040A(R)/MDS050A(R)/MDS060A(R)/MDS070A(R)	
Between the outdoor unit and the first branch connector					
Liquid pipe			Φ9.52mm×t0.8	Φ9.52mm×t0.8	Φ9.52mm×t0.8
Gas pipe			Φ15.88mm×t1.0	Φ19.05mm×t1.0	Φ22.23mm×t1.0
Between branch connectors					
Liquid pipe	Total capacity of all the indoor units that this pipe connects to	<22.5kW	Φ9.52mm×t0.8		
		22.5kW ≤C<30kW	Φ12.70mm×t0.8		
		30kW ≤C<30kW	Φ15.88mm×t1.0		
Gas pipe	Total capacity of all the indoor units that this pipe connects to	<9.0kW	Φ15.88mm×t1.0		
		9.0kW≤C<16kW	Φ19.05mm×t1.0		
		16kW≤C<22.5kW	Φ22.23mm×t1.0		
		22.5kW≤C<33kW	Φ28.60mm×t1.0		
Between the branch connector and the indoor unit					
Liquid pipe	Indoor units that this pipe connects to	Consistent with the connector of the indoor unit			
Gas pipe	Indoor units that this pipe connects to	Consistent with the connector of the indoor unit			

Specification table for MDS-B Series

Outdoor unit capacity		MDS080B(R)/ MDS100B(R)	MDS120B(R)	MDS150B(R)/ MDS180B(R)/ MDS200B(R)	MDS260B(R)/ MDS220B(R)/ MDS240B(R)	MDS280B(R)/ MDS300B(R)	MDS320B(R)
Type							
Between the outdoor unit and the first branch connector							
Liquid pipe		Φ12.70mm×t0.8	Φ15.88mm×t1.0	Φ15.88mm×t1.0	Φ19.05mm×t1.0	Φ19.05mm×t1.0	Φ19.05mm×t1.0
Gas pipe		Φ28.60mm×t1.0	Φ28.60mm×t1.0	Φ34.90mm×t1.3	Φ38.10mm ×t1.4	Φ41.30mm×t1.5	Φ41.30mm×t1.5
Between branch connectors							
Liquid pipe	Total capacity of all the indoor units that this pipe connects to	<16kW	Φ9.52mm×t0.8				
		16kW≤C<22.5kW	Φ12.70mm×t0.8				
		22.5kW≤C<50kW	Φ12.77mm×t0.8	Φ15.88mm×t1.0			
		50kW≤C<85kW	—	—	—	Φ19.05mm×t1.0	
Gas pipe	Total capacity of all the indoor units that this pipe connects to	<9.0kW	Φ15.88mm×t1.0				
		9.0kW≤C<16kW	Φ19.05mm×t1.0				
		16kW≤C<22.5kW	Φ22.30mm×t1.0				
		≥22.5kW<36kW	Φ28.60mm×t1.0				
		36kW≤C<50kW	—	—	Φ34.90mm×t1.3		
		50kW≤C<69kW	—	—	—	Φ38.10mm×t1.4	
		69kW≤C<85kW	—	—	—	—	Φ41.30mm×t1.5
		Between the branch connector and the indoor unit					
Liquid pipe	Indoor units that this pipe connects to	Consistent with the connector of the indoor unit					
Gas pipe	Indoor units that this pipe connects to	Consistent with the connector of the indoor unit					

Remark:

- Pipe thickness selection is based on certain material in GB/T1527-1997. If using different material, design pressure must be 3.0 MPa according to local standard.
- If the units are installed in corrosive environment, the pipe must be 0.2mm thicker.
- This list shows only the minimum thickness. Bending or stretching may reduce the thickness, please consider the compensation.

3.2 Requirements on size of refrigerant copper pipe of R410A series units

Specification table for 5MDS-B Series



Outdoor unit capacity			MDS050B(R)5/ MDS060B(R)5/ MDS070B(R)5	MDS 080B(R)5	MDS100/ 120B(R)5	MDS140/160/ 180B(R)5	MDS200/220/ 240B(R)5	MDS260/280/ 300B(R)5	MDS380/400/ 420/440/460/ 480/500B(R)5	
Type										
Between the outdoor unit and the first branch connector										
Liquid pipe			Φ9.52×t0.8	Φ9.52×t0.8	Φ12.70×t0.8	Φ12.70×t0.8	Φ15.88×t1.0	Φ15.88×t1.0	Φ19.05×t1.0	
Gas pipe			Φ15.88×t1.2	Φ22.23×t1.0	Φ22.23×t1.0	Φ28.60×t1.0	Φ28.60×t1.0	Φ34.90×t1.0	Φ41.30×t1.5	
Between branch connectors										
Liquid pipe	Indoor units that this pipe connects to	<25kW	Φ9.52	Φ9.52×t0.8						
		25kW≤C<33kW	-	Φ12.70×t0.8						
		33kW≤C<48kW	-			Φ12.70×t0.8				
		48kW≤C<74kW	-					Φ15.88×t1.0		
		74kW≤C<85kW	-					Φ15.88×t1.0		
		85kW≤C<102kW	-					Φ19.05×t1.0		
		≥102 kW	-						Φ19.05×t1.0	
Gas pipe	Indoor units that this pipe connects to	<25kW	Φ15.88×t1.2	Φ15.88×t1.0						
		25kW≤C<33kW	-	Φ22.20×t1.0						
		33kW≤C<48kW	-			Φ28.60×t1.0				
		48kW≤C<74kW	-					Φ28.60×t1.0		
		74kW≤C<85kW	-					Φ34.90×t1.3		
		85kW≤C<102kW	-						Φ34.90×t1.3	
		≥102kW	-						Φ41.30×t1.5	
Between the branch connector and the indoor unit										
Liquid pipe	Indoor units that this pipe connects to		Consistent with the connector of the indoor unit							
Gas pipe	Indoor units that this pipe connects to		Consistent with the connector of the indoor unit							

Remark:

1. Pipe thickness selection is based on certain material in GB/T1527-1997. If using different material, design pressure must be 4.15 MPa according to local standard.
2. If the units are installed in corrosive environment, the pipe must be 0.2mm thicker.
3. This list shows only the minimum thickness. Bending or stretching may reduce the thickness, please consider the compensation.


3.3 Dimensions of refnet and distributor

Pipe connector model	Length (mm)				Diameter (mm)				Diameter (mm)						Diameter (mm)				
	A	B	C	D	E(Outer diameter)	F	G	H	I	J	K	L	M	S	N(Outer diameter)	O	P	Q	R
MDS-Y1	553	172	293	120	28.6	28.9	25.7	22.5	28.6	28.9	25.7	22.5	19.3	16.1	22.2	19.3	16.1	12.9	9.7
MDS-Y2	420	142	223	80	15.88	16.1	12.9	9.7	12.7	12.9	9.7	6.5	/	/	12.7	12.9	9.7	6.5	/
MDS-Y3	420	142	223	80	15.88	16.1	12.9	9.7	1.7	12.9	9.7	6.5	/	/	15.88	16.1	12.9	9.7	/
MDS-Y4	493	142	223	80	22.2	22.5	19.3	16.1	19.1	19.3	16.1	12.9	9.7	/	19.1	19.3	16.1	12.9	/

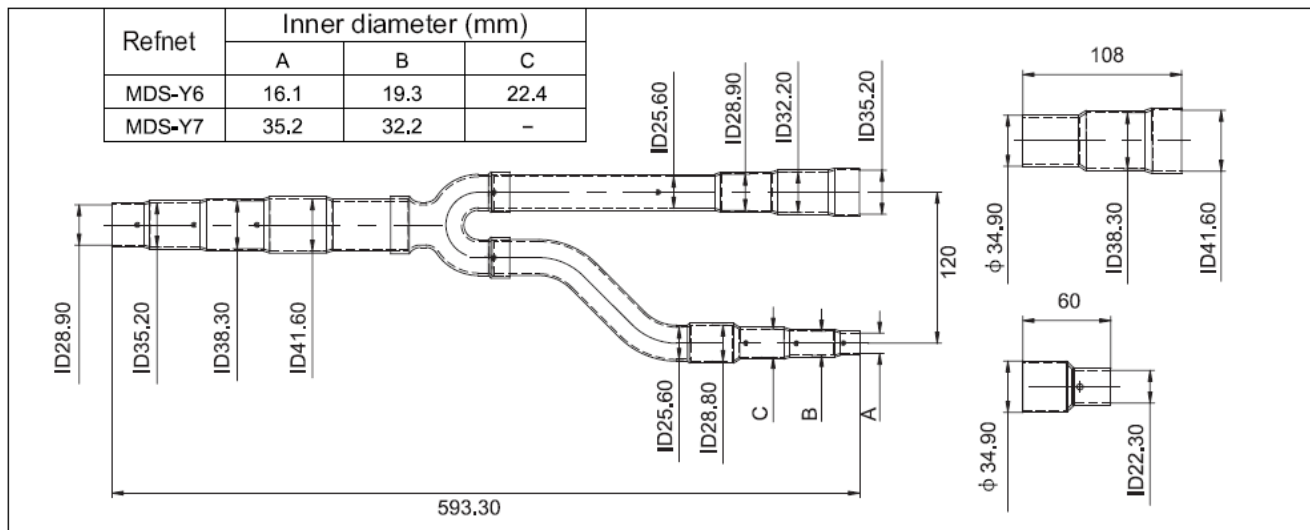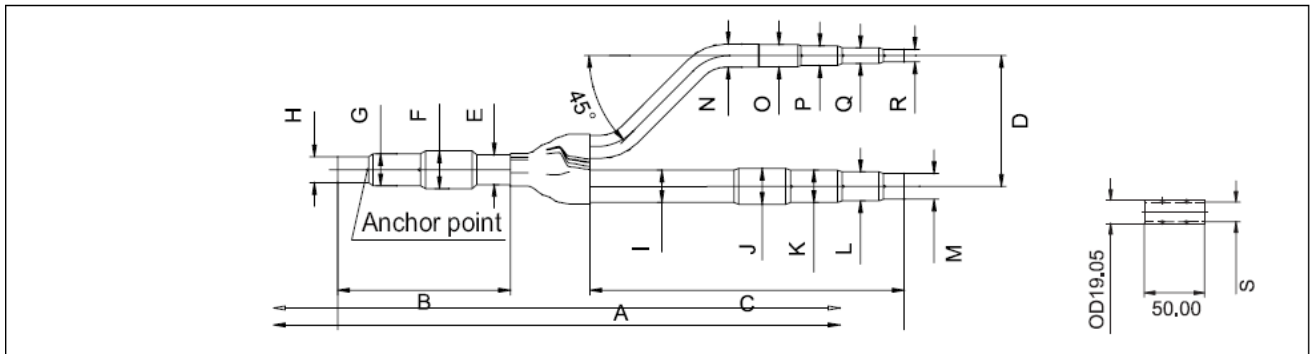


(C type refnet)

Refnet model	Inside diameter (mm)					Inside diameter (mm)			
	A (outside diameter)	B	C	D	E	F (outside diameter)	G	H	I
MDS-C1	19.05	19.3	16.1	12.9	9.7	12.7	12.9	9.7	6.5

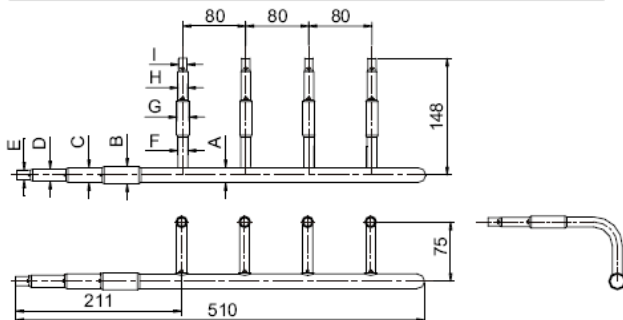

Refnet model	Inside diameter (mm)				
	A (outside diameter)	B	C	D	E
MDS-C2	28.6	28.9	25.7	22.5	19.3
MDS-C3	25.4	25.7	22.5	19.3	16.1

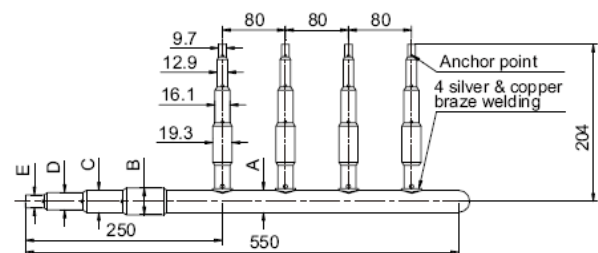

3.4 Combination between indoor unit and EXV box

	Liquid Pipe Diameter (Inch)		AEX Model	
Indoor Model	R-22	R-410A	R-22	R-410A
AWMD 09G	1/4	1/4	AEX-15-2SAP-D	
AWMD 10G	1/4	1/4	AEX-15-2SAP-D	
AWMD 15G	1/4	1/4	AEX-15-2SAP-D	
AWMD 20G	1/4	1/4	AEX-18-2SAP-D	
AWMD 25G	3/8	1/4	AEX-18-3SAP-D	AEX-22-2SAP-D
ACKD 10C	1/4	1/4	AEX-15-2SAP-C	
ACKD 15C	1/4	1/4	AEX-15-2SAP-C	
ACKD 20C	1/4	1/4	AEX-18-2SAP-C	
ACKD 20A	1/4	1/4	AEX-18-2SAP-C	
ACKD 25A	3/8	1/4	AEX-18-3SAP-C	AEX-22-2SAP-C
ACKD 30A	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACKD 40A	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACKD 50A	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACCD 10C	1/4	1/4	AEX-15-2SAP-C	
ACCD 15C	1/4	1/4	AEX-15-2SAP-C	
ACCD 20C	1/4	1/4	AEX-18-2SAP-C	
ACCD 25C	3/8	1/4	AEX-18-3SAP-C	AEX-22-2SAP-C
ACCD 28C	-	3/8	-	AEX-22-3SAP-C
ACCD 30C	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACCD 38C	-	3/8	-	AEX-22-3SAP-C
ACCD 40C	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACCD 50C	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACCD 60C	1/2	3/8	AEX-24-4SAP-C	AEX-24-3SAP-C
ACMD 15E	-	1/4	-	AEX-15-2SAP-C
ACMD 15E	1/4	1/4	AEX-18-2SAP-C	
ACMD 15E	3/8	1/4	AEX-18-3SAP-C	AEX-22-2SAP-C
ACMD 15E	3/8	3/8	AEX-18-3SAP-C	AEX-22-3SAP-C
ACMD 40D	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACMD 50D	3/8	3/8	AEX-24-3SAP-C	AEX-22-3SAP-C
ACMD 62D	1/2	3/8	AEX-24-4SAP-C	AEX-24-3SAP-C
ADBD 80	1/2	1/2	Built-in EXV available	
ADBD 100	1/2	1/2	Built-in EXV available	



While utmost care is taken in ensuring that all details in the publication are correct at time of going to press, we are constantly striving for improvement and therefore reserve the rights to alter model specifications and equipment without prior notice. Details of specifications and equipment are also subject to change to suit local conditions and requirements and not all models are available in every market.